

1D Laser Barcode Scanner User Manual Version	This manual is simplified ,for detailed manual information please download the completed user manual from our website or obtain it from our distributor. Factory Default  Note:Default interface:USB-HID Setting Procedure: Scan required bar codes Example: Factory default,USB-HID,add suffix "Enter"ect barcode as below 1 Factory Default  2 Enter  Interfaces USB-HID USB-COM PS2 RS232	Scan Mode Manual Continuous Automatic Auto-Induction ON OFF Buzzer OFF ON Low High Image Inverted Direct	Reverse Keyboard Language USA UK French Suffix Setting Enter Enter&Line feed Cancel USB-COM、RS232 Baud Rate Setting 4800 9600 19200 38400
--	---	--	---

57600 115200 Shock Setting Enable Disable Barcode Setting Enable Code 39 Disable Code 39 Enable UPC-A Disable UPC-A Enable UPC-E Disable UPC-E	Enable EAN-13 Disable EAN-13 Enable EAN-8 Disable EAN-8 Enable Code-93 Disable Code-93 Enable Code-128 Disable Code-128 Enable Codabar Disable Codabar Enable Interleaved 2 of 5	Disable Interleaved 2 of 5 Enable Industrial 25 Disable Industrial 25 Enable MSI Disbale MSI Enable Plessey Disable Plessey Enable Code-11 Disable Code-11 Enable Matrix 2 of 5 Disable Matrix 2 of 5	Enable Postcode 25 Disable Postcode 25 Enable Aviation 25 Disable Aviation 25 Enable GS1 Omnidirectional Disable GS1 Omnidirectional Enable GS1 Limited Disable GS1 Limited
--	--	---	---