

2D Barcode Scanner
User’s Manual



V5.0

This quick user manual is designed for 2D barcode scanner,if you need the special code upgrade firmware ,please download the complete user’s manual from our website or contact our authorized distributors.

Note: The setting code is a functional bar code, please do not scan it when it is not necessary, please scan the bar code on the product to test the transmission function.

▼ Factory Default Setting



Factory Default Setting

Note:Factory default settings are marked with an asterisk“*”in this manual.

▼ Interface



* USB Keyboard



USB COM



Rs232

▼ All codes



All 1D code on



All 1D code off



All 2D code on



All 2D code off

▼ DM /Reverse DM Code



DM



Reverse DM Code

▼ Beep



* On sound



Off sound

▼ Indicator ON/OFF




* LED indicator on




LED indicator off

▼ Add terminal Key troke

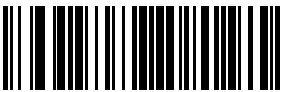

* Enable CR

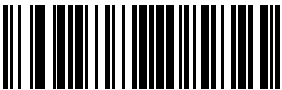

Disable CR



Enable LF



Disable LF

▼ Upper case and lower case letter conversion



Convert to lower case letters



Convert to upper case letter



Setting

▼ QR URL code configuration



* URL On



URL Off

Note: Desktop 2D barcode scanner turns off the URL code by default, and 2D handheld scanner turns on the URL code by default.

▼ Keyboard layout



* USA



FRANCE



GERMANY



ITALY



SPAIN



RUSSIA



JAPAN

Serial port setting

▼ Baud rate



4800



* 9600



19200



38400



57600



115200